


ortofon

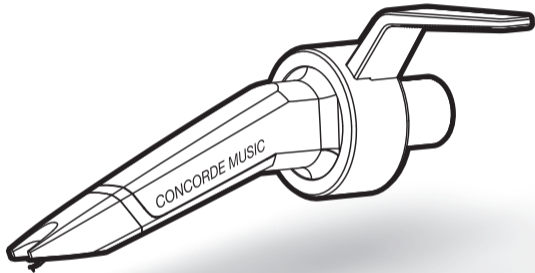

accuracy in sound

CONCORDE MUSIC

CONCORDE MUSIC

Thank you for choosing an Ortofon Concorde Music Cartridge.
This premium phono cartridge is designed and manufactured in Denmark.

At Ortofon, we have been working with sound reproduction since 1918. We developed the first phono cartridge in 1948, and since then, more than 300 different phono cartridges have been developed and manufactured.

Building upon a rich legacy that began when launching the original Concorde, the Concorde Music holds a storied history as one of the most famous cartridges in the world of audio. Originally developed as a solution to the challenge of easy mounting on a tonearm without screws or wires, the Concorde's unique design earned the Danish Industrial Design Award and became an icon in the audio industry.


With an empowered motor featuring a quad-coil system and silver-plated oxygen-free copper, it delivers enriched sound, providing listeners with unmatched clarity and precision for an immersive music experience.


We wish you a joyful and premium listening experience with your new Concorde Music cartridge.



Mounting the *CONCORDE MUSIC* cartridge


1. To protect the stylus, it is recommended to keep the stylus guard on the stylus when installing or removing the cartridge.
2. Mount and connect the cartridge by plugging the cartridge into the end of the tonearm, and gently tighten the finger screw.
3. Please set the tracking force to 1.8 g to ensure optimal tracking and sound quality.
4. Adjust the anti-skating according to the record player's manual.

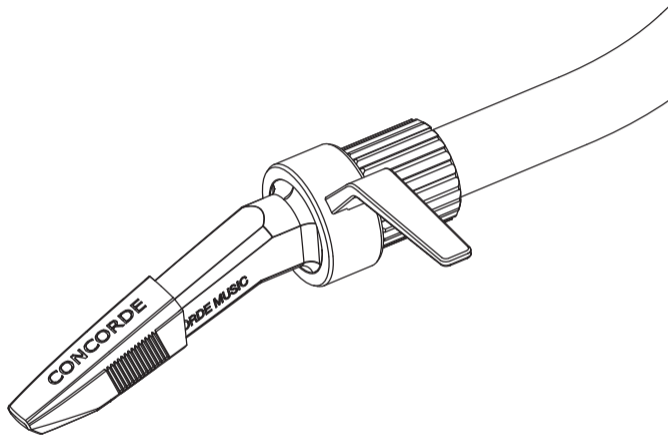

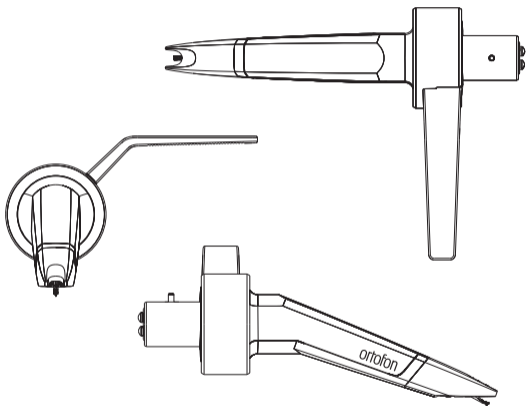

Stylus guard


Remove the stylus guard before use by holding each side of the guard with your fingers and gently moving it in the opposite direction of the stylus.

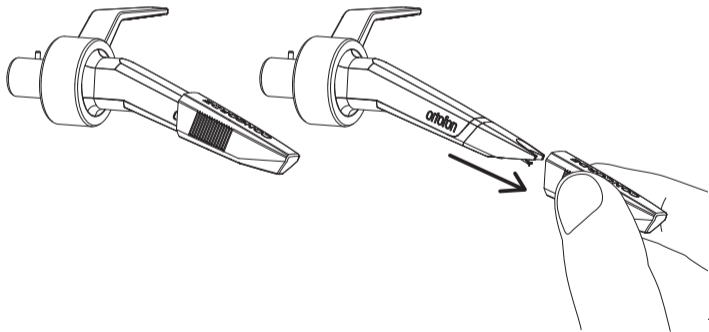

Stylus care and maintenance


Remove dust from the stylus regularly by using a stylus brush to obtain optimal sound reproduction.

Do not use alcohol, solvents, or any other cleaning fluids to clean the product as this may damage it.

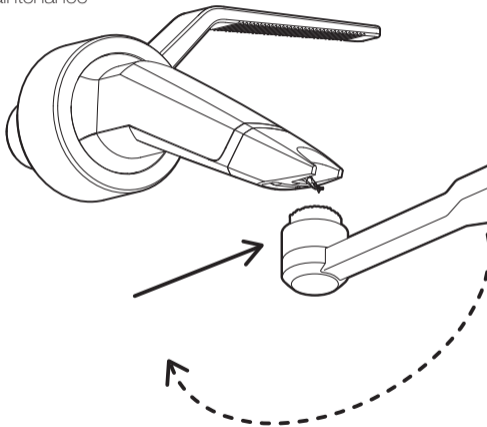

Warning

This phono cartridge is only for mounting on tonearms and must not be used for any other purposes.

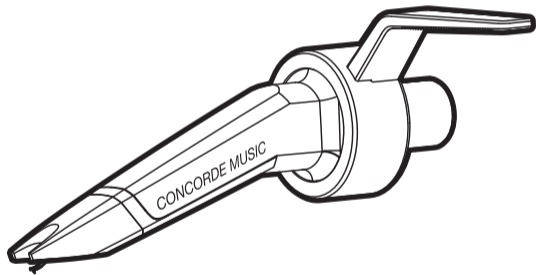



Bronze	Black	Black LVB 250
6 mV	6 mV	6 mV
Aluminium	Aluminium	Boron
Nude Fine Line	Nude Shibata	Nude Shibata
1.8 g	1.8 g	1.8 g
47k Ω	47k Ω	47k Ω
150–300 pF	150–300 pF	150–300 pF
18 g	18 g	18 g



Scan and follow the QR code for setup information (www.ortofon.com/support).

04-2415-800175-12

ortofon
accuracy in sound

Ortofon A/S | Stavangervej 9 | DK-4900 Nakskov
support@ortofon.dk | www.ortofon.com

